

TITAN REMOTE



LEARNING MODE

Learning Precautions

- Your original remote controls must be in working order for learning to work properly.
- Learned keys are mode-specific, so each one can store a unique function for each mode.
- Do not use the following keys for learning: Mode Keys, SETUP, Record (•), Tune-In Keys.
- Learning capacity is approximately 16 to 25 keys, depending on the code being learned.
- Certain device functions are not learnable including multi-frequency types, some high frequency ones, and other unusual formats.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

NOTE: Please have your original remote controls handy before programming learning.

Programming a Learned Key


NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press and hold SETUP until the last-selected mode key blinks twice, then press 9 7 5.



NOTE: If the LED displays one long flash instead, either your batteries are low, or the Titan Remote Control has a memory fault.


2. Press a mode key once (i.e., AUX, DVD, AUD, TV, or STB) to assign a mode for learning.
3. Place the Titan Remote Control head-to-head (about 2" apart) from your original

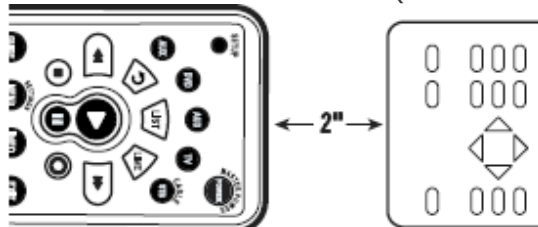

remote control.

4. Press the key on your Titan remote control that is supposed to learn the new code. The mode LED begins blinking rapidly. On the original remote, press and hold the key to be learned. Continue holding the key on the original remote until the Titan Remote Control's LED blinks twice.




NOTE: If the LED on the Titan remote displays one long blink, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the function is still not captured, press and hold SETUP to exit programming and review the "Learning Precautions". After review, start programming again at step 1.

5. Repeat steps 2 through 4 for another mode SETUP and/or key or press and hold SETUP to exit programming. 

Deleting a Single Learning Key



This process returns the key to its original programming for the mode you select. You can also delete learned programming by teaching a different function to the key.

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press and hold SETUP until the last-selected mode key blinks twice, then press 9 7 6.

2. Press a mode key once (i.e., AUX, DVD, AUD, TV, or STB). 
3. Press the key containing the learned function to be deleted twice. The mode LED blinks once.
4. Repeat steps 2 through 3 for another key or press and hold SETUP to exit programming. 

Deleting All Learned Keys in a Specific Mode

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press and hold SETUP until the last-selected mode key blinks twice, then press 9 7 6.

2. Press a mode key twice (i.e., AUX, DVD, AUD, TV, or STB) to clear all the learned keys for that mode. The LED blinks twice. 
3. Repeat step 2 through 3 for another mode and/or key or press and hold SETUP to exit programming. 